 


Before using the machine, please also read the instructions for use carefully!

AWZ 9995

Quick Reference Guide

GB



Programme selector knob

The drying programme is selected by turning this knob.

Départ (Pause)



"Départ (Pause)" button

The drying programme is started by pressing this button. The indicator lamp flashes during the selection phase and lights up during drying.

Indicator lamps

Réservoir



Water container

The indicator lamp lights up when the water container needs to be emptied. The drying cycle is automatically interrupted. Empty the container and restart the drying programme. **Empty the water container after every drying cycle.**

Filtre



Filter

The indicator lamp lights up when the filter and/or heat exchanger need cleaning. **Clean the filter at the end of every cycle.**



Time remaining display

Depending on the programme selected, once the drying cycle has been started, a default drying time is displayed. The time displayed is corrected by a few minutes depending on the volume, type and dampness of the laundry. **The drying time specified is a calculated value which will be updated during the drying programme.**




The flashing lines indicate that the calculation is running. The remaining time will be updated.



Overdry protection

The indicator lamp lights up when a humidity controlled programme is selected, to indicate the working protection function. Function is not active in time controlled programmes 20' 40' 60' and "Fraîcheur".

Programme sequence

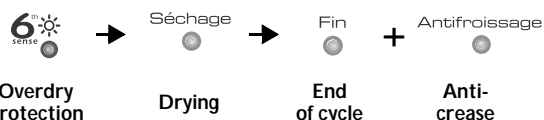

Options

Délicat



Gentle

Reduces drying intensity (recommended for delicate items).

Coton intensif



Rapid

Shortens drying duration (recommended for thin items of the same size).

Sonnerie



Buzzer

Signals/sounds end of drying cycle.

Antifroissage plus



Anti-crease

Prevents laundry from creasing up to 12 hours. Buzzer and Anti-crease cannot be selected together.

Départ différé



Delayed Start

Delays the start of the drying cycle by 1 to 9 hours.

Each time the button is pressed, the start time is delayed by 1 hour. Then press the "Départ (Pause)" button to confirm the final selection and to start the dryer.

The delayed start indicator lamp flashes and the countdown counts down in 1-hour intervals. The countdown is indicated by the indicator lamp above the button flashing. During the countdown, the drum will turn from time to time to re-distribute the laundry. To cancel or change the previously set time delay, set the programme selector knob to "Arrêt" or open the door.

Machine operation

Additional information (including troubleshooting and service) can be found in the individual chapters of the instructions for use.

Sort laundry according to care symbols:



Do not tumble dry



Suitable for tumble drying - at low drying temperature



Suitable for tumble drying

Sort by:

Material thickness: Whenever there is greater load than the dryer can handle, separate laundry according to weight (e.g. dry towels and thin underwear separately).

Type of material: Cotton (linen); synthetic textiles (easy care).

Degree of drying: Cupboard dry, iron dry etc.

Do not tumble dry: Woollens, silk, nylon stockings, delicate embroidery, fabrics with metallic decorations, bulky items such as sleeping bags, etc.

Preparing laundry

Check that all fastenings are closed and that pockets are empty. Please ensure that there are no cigarette lighters in the wash. Turn laundry inside out.

Opening door

Pull the door handle. If the child safety lock is activated, please deactivate it (additional information can be found in the "Door Reversibility/Child Safety Lock" chapter of the instructions for use).

Loading dryer and closing door

Place laundry loosely in the drum to achieve equal drying throughout. Then close the door.

Switching on machine and selecting programme

Select the drying programme required by turning the programme selector knob (for information, refer to programme table).

Selecting options (if available)

Select the option required by pressing the corresponding button.

The indicator lamp above the relevant button lights up to confirm your selection. An alarm sounds if an incorrect selection is made (incompatible options). Press the button again to cancel the option.

Starting dryer

The drying programme is started by pressing the "Départ (Pause)" button. The relevant indicator lamp lights up.

Changing programme selection: If the programme selected is changed during drying, the dryer stops. The "Départ (Pause)" indicator lamp flashes. To operate the new programme, again press the "Départ (Pause)" button.

Interrupting programme: To interrupt the dryer during the drying cycle, set the programme selector knob to "Fraîcheur" and press the "Départ (Pause)" button. Wait at least 5 minutes before opening the door to allow the dryer to cool down. For your safety the drying cycle stops automatically if you open the door. To restart, after door opening, close the door and press the "Départ (Pause)" button again.

Programme end - unloading dryer

Fin



End: Take the laundry out of the dryer. The drying process is complete and the anti-crease phase has been reached (active).

Antifroissage



Anti Crease: If the laundry is not removed at the end of the drying cycle, an automatic anti-crease cycle will operate for maximum 60 min. The drum rotates at regular intervals to prevent the laundry from creasing.

Switching dryer off

Set the programme selector knob to "Arrêt".

Cleaning the lint filter: Open door, pull lint filter up and out of machine and open it. Brush lint using a soft brush or your fingertips. Close lint filter and push firmly back into place.

Emptying water container: Pull container out by the handle and empty. Replace the container when empty by pushing it completely back into place.

If required, activate child safety lock (additional information can be found in the "Door Reversibility/Child Safety Lock" chapter of the instructions for use).

Please note: Only use additives/plastic items specified as dryer safe and rinse items that have been treated with stain remover thoroughly in plenty of water before drying. Never dry rubber objects or objects stained with vegetable oils in the dryer.

Overview of programmes					Options					Approximate drying times (in minutes)	
Type of textile			Fabrics	Volume of load kg	Gentle	Rapid	Buzzer	Anticrease	Start Delay	Very wet load	Wet load
Programmes / Drying levels					Délicat	Coton intensif	Sonnerie	Antifroissage plus	Départ différé		
Cotton	Prêt à ranger	Cupboard dry +	Cotton or linen hot wash / coloured laundry Coton Max. 7 kg	3.0 7.0	X	X	X	X	X	85' 150'	70' 120'
	Normal	Cupboard dry *		3.0 7.0	X	X	X	X	X	80' 130'	60' 110'
	Prêt à repasser	Iron dry *		3.0 7.0	X	X	X	X	X	60' 110'	50' 85'
Mixed fabrics	Prêt à ranger	Cupboard dry +	Synthetic, mixed fibre or cotton easy care (ironing not required) laundry Synthétique Max. 2.5 kg	1.0 2.5	X	-	X	X	X	30' 55'	25' 45'
	Normal	Cupboard dry *		1.0 2.5	X	-	X	X	X	25' 45'	20' 35'
	Prêt à repasser	Iron dry *		1.0 2.5	X	-	X	X	X	20' 35'	15' 25'
Delicate plus	Normal	Cupboard dry	Laundry made from synthetic fibres such as polyamide, nylon, polyacrylic, etc. Fibres sensibles Max. 2.5 kg	2.5	X	-	X	X	-	100'	85'
Airing	Laundry is aired and refreshed for 30 minutes without heating.		Fraîcheur	-	-	-	-	-	-	-	-
Time/cycle	Completes drying or dries single items (suitable for all fabrics).		Programme with fixed duration 20' 40' 60'	-	X	-	X	X	-	20' 40' 60'	

* Test programme in accordance with EN 61121.

How to proceed if ...

...you want to correctly care for and clean your dryer:

Clean the filter at the end of every cycle.



- Open the door.
- Pull the filter upwards.
- Open the filter.
- Brush lint using a soft brush or your fingertips.
- Close the filter.
- Push the filter back into place.

Empty the water container at the end of each drying cycle.



- Pull the handle to remove the water container.
- Empty the water container.
- Replace the water container when empty by pushing it **completely** back in place.
- Remove fibres in and around the water evacuation hole at least once per month.

**Clean the heat exchanger at least every month.
(For further information see chapter "Heat Exchanger" in the Instructions for Use).**

...you want to check the dryer yourself first:

(If your machine is not functioning correctly, please check the following points before phoning for the customer service – also refer to relevant chapter in the instructions for use)

Drying takes too long / laundry is not dry enough



- Has the correct drying programme been selected?
- Was the inserted laundry too wet (washing machine spin speed less than 1000 rpm)?
- Is the lint filter dirty (filter indicator light on)?
- Is the heat exchanger dirty? (for more information, refer to the instructions for use)
- Is the room temperature too high?
- Are the END "Fin" and Anti-crease "Antifroissage" indicator lamps lighting up? The drying cycle is complete and the laundry can be taken out.

The dryer will not operate (after a power failure, always press the "Départ (Pause)" button).



- Is the plug properly inserted into the mains electricity socket?
- Is there a power failure?
- Has the fuse blown?
- Is the door properly closed?
- Has a drying programme been selected?
- Has the "Départ (Pause)" button been pressed?

Lint filter or water container indicator lamp on.



- Is the lint filter clean?
- Is the water container empty?
- Has the water container been inserted correctly?
- Is the heat exchanger clean?

Water droplets underneath the dryer.



- Has the heat exchanger been inserted correctly?
- Has any fluff on the heat exchanger seal been wiped away?
- Has any fluff on the door seal been wiped away?
- Has the water container been inserted correctly?

AFTER-SALES SERVICE

If the fault is still present once the above checks have been undertaken or should the fault occur for a second time, switch the machine off. Please contact your after-sales service representative (for more information, refer to the warranty manual).

Please have the following details ready when calling your after-sales service representative:

- the nature of the fault.
- the dryer type and model
- the service code (the number after the word Service on the adhesive rating plate) on the right-hand side when the door is open.

SERVICE 0000 000 00000

